




Multi-purpose small air sterilizer

# ZEOLSON

Refreshing privacy created with perfect sterilizing power-space

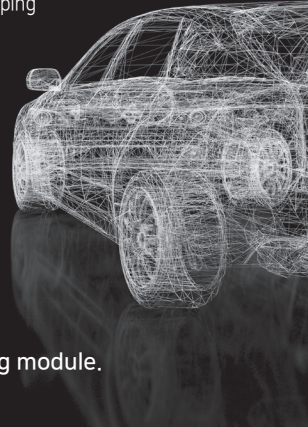

## Concept

Compact air sterilizer for use in vehicles and indoor desks  
Intuitive status check method through product lighting response according to surrounding air quality conditions Design that stimulates curiosity and trust in users by discreetly showing the internal sterilizing module.  
Mood lighting that can change the atmosphere of the room in use.

## Air quality status display LED (Moon Lighting)

Compared to car and table air purifiers that purify air only through filters  
A small air sterilizer product that uses zeolite technology to remove various bacteria and odors.



Very Good ● ————— ● Worst

Office – Home – Desk



Vehicle – Cup Holder





## Precautions for Safe Use

- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge who cannot use the device safely without supervision or instruction.
- It is recommended that children be supervised to ensure that they do not play with the device.
- This device must be used with the power supply unit supplied with the device.
- This device must be supplied only with the safety extra-low voltage corresponding to the marking on the device.
- This product may generate ozone due to the ionizer, so ventilation is recommended when using it for a long time.



### WARNING

|                                                                                                                                                                        |                                                                                                                                                        |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> Do not remove or move the power plug while driving.<br>- It may cause breakdowns and fire.                                                                    | <b>2</b> Do not spray pesticide or use flammable sprays on the product.<br>- It is harmful to human body, and may cause breakdowns and electric shock. |
| <b>3</b> Be sure to use the supplied adapter or USB power cord.<br>- Use of non-standard products may cause device failure.                                            | <b>4</b> Do not place flammable substances (spray, oil, gas) around the product.<br>- It may cause explosion or fire.                                  |
| <b>5</b> In case of the damage to power cord, do not use the product and request post-sale service.<br>- It may cause fire due to electric shock or short circuit.     | <b>6</b> Do not stand on the product or put heavy objects on top of the product.<br>- It may cause breakdown and deformation.                          |
| <b>7</b> Be sure to insert a filter before using.<br>- If used without a filter, the lifespan of product will be shortened and may result in electric shock or injury. | <b>8</b> Do not spray water directly on the product.<br>- It may cause breakdowns and electric shocks.                                                 |
| <b>9</b> Do not plug in or touch the power plug with wet hands.<br>- It may cause electric shock.                                                                      | <b>10</b> Do not plug in or touch the power plug with wet hands.<br>- Contact service center as there is a risk of breakdown, electric shock, or fire. |
| <b>11</b> Do not pull out the power cord when removing it.<br>- It may cause electric shock or fire.                                                                   | <b>12</b> Do not place the product near hot air balloons.<br>- It may cause deformation, discoloration and fire.                                       |
| <b>13</b> If the pre-filter is washed with water, dry it completely before putting in the product.<br>- There is a risk of a short circuit and fire.                   | <b>14</b> Do not shock the product severely.<br>- It may cause a breakdown.                                                                            |

# 1. Names of each part / accessories

## Name of each part of the product



Front side



Right side



Back side

## Products and Accessories



Air sterilizer



Adapter



USB connection cable



User's Guide

## 2. How to use the product

### How to use

#### ► Preparation before use

##### 1. Prepare products and accessories.

- Check whether the product, adapter, and USB power cable are present. Prepare accessories.

##### 2. Check commercial use.

- When using it connected to a car or computer, the product and a USB connection cable are required.
- If you use a regular power source, you will need the product, adapter, and USB power connection cable.

#### ► Driving / Stop

##### 1. When used in a vehicle

- Insert the USB power cable into the USB power connection port.
- Plug the end of the power cord into the product and place the product in the cup holder in the vehicle.
- Set the power switch on the right side of the product to ON.
- For the first 3 minutes, the indoor air is pre-purged and the pollution sensor reaches "0".

We proceed with matching.

- After 3 minutes, the LED color changes from red to yellow depending on the indoor pollution level.
- It changes in the order of green – blue and operates automatically.
- Red lights up when the pollution level is severe, and blue lights up when the indoor air is dirty.


Operates in clean conditions.

##### 2. When used in a study room

- Insert the power supply adapter into the wall outlet.
- The remaining steps are the same as "When using in a vehicle" above.

### 3. Filter disassembly and cleaning method

#### Disassembly and cleaning method

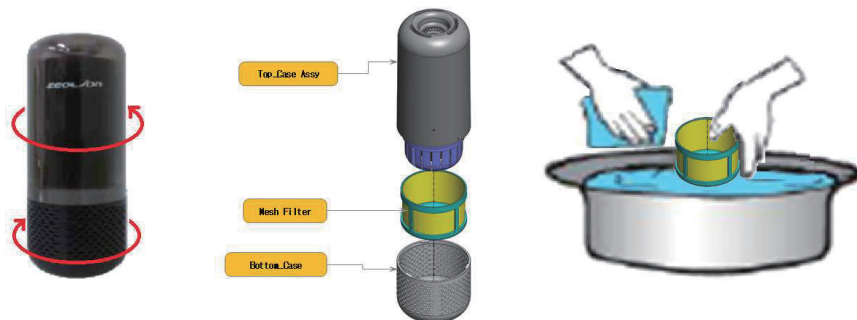

1. Disassemble and clean the pre-filter every month.
2. To disassemble the filter, hold the upper side of the product and turn the lower side clockwise.  
BOTTOM CASE is separated.
3. If the BOTTOM CASE is separated, pull the filter downward on the product to separate the filter.
4. Wash the separated filter thoroughly with water to remove any foreign substances.
5. When FILTER cleaning is complete, remove moisture with a fine cloth. Just assemble in reverse order of disassembly.


## 4. Installation method by location

### 1. Installation method in vehicle



1. Connect the USB wire to the vehicle's USB terminal and place the end of the USB wire in an air sterilizer. Insert it into the hole located on the back.
2. Turn the power switch on the right side of the air sterilizer to the ON position.

### 2. Installation of children's study room

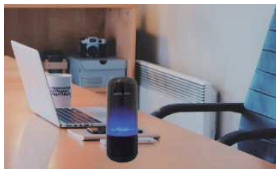

1. Connect the USB wire to the USB terminal of the computer and then unplug the end of the USB wire. Insert it into the hole located on the back of the air sterilizer.
2. Turn the power switch on the right side of the air sterilizer to the ON position.

### 3. Installation method using 220V outlet



1. Connect the supplied adapter to the USB wire and then connect it to a 220V outlet. Insert the end of the USB wire into the hole located on the back of the air sterilizer.
2. Turn the power switch on the right side of the air sterilizer to the ON position

# WARRANTY

|                   |                         |                  |          |
|-------------------|-------------------------|------------------|----------|
| Product name      | Air cleaning sterilizer | Model            | KZ-03ASD |
| Manufacturing No  |                         | Date of purchase |          |
| Place of purchase |                         | Customer name    |          |
| Address           | Phone                   |                  |          |

- This product compensates customers for legitimate damages in accordance with the Korea Consumer Agency's Consumer Damage Compensation Regulations.
- For agency's service, please contact the customer service office.
- If used for business purposes (business activities, abnormal use environments, etc.) rather than for home use, the warranty period is decreased by half.
- This certificate is only valid domestically.

| Classification                                                             | Customer damage type                                                                  | Compensation details                                                   |                       |
|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------|------------------------------------------------------------------------|-----------------------|
|                                                                            |                                                                                       | Within warranty period                                                 | After warranty period |
| Performance and functional defects that occur naturally in normal use.     | Critical repairs are required within 10 days of purchase                              | Product exchange or refund of purchase price                           | Not applicable        |
|                                                                            | Critical repairs are required within one month of purchase                            | Product exchange or free repair                                        |                       |
|                                                                            | The product failure requires significant repair within 1 month after product exchange | Refund of purchase price                                               |                       |
|                                                                            | Not able to exchange                                                                  |                                                                        |                       |
|                                                                            | Damages caused by transports process and occurred at time of product installation     | Product exchange                                                       |                       |
|                                                                            | Defect occurs within the warranty period                                              | Free repair                                                            | Paid repair           |
|                                                                            | 4th failure due to the same defect                                                    | Product exchange or refund of purchase price                           |                       |
|                                                                            | 5th failure after repairing several different parts                                   |                                                                        |                       |
|                                                                            | Not repairable                                                                        |                                                                        |                       |
|                                                                            | Not Repairable due to insufficient repair parts                                       |                                                                        |                       |
| The product requested for service by consumer is lost by business operator | 10% addition to depreciation amount of list price                                     |                                                                        |                       |
| Breakdown due to consumer's willful negligence or mistake                  | Repairable                                                                            | Paid repair                                                            |                       |
|                                                                            | Not repairable due to insufficient repair parts                                       | Product exchange after collecting the amount equivalent to paid repair |                       |

## Quality assurance and parts retention periods for each product

| Product                 | Quality Assurance Period   | Parts retention period |
|-------------------------|----------------------------|------------------------|
| Air Cleaning Sterilizer | 1 year (for home use only) | 7 years                |

바이러스썩

제올리온

VIRUSSAC

ZEOLSON

|                   |          |
|-------------------|----------|
| Model             | KZ-03ASD |
| Power supply      | DC5V     |
| Power consumption | 3W       |

## VIRUSSAC.CO.,LTD.

22123, 551Ho, Juan Pilot Industria Complex, 58 Juyeom-ro, Michuhol-gu,  
Incheon Metropolitan City, Republic of Korea

T. +82.32.819.0981 F. +82.32.819.0980

Homepage : <http://www.virusssac.com>